

1. General storage conditions

The following conditions need to be met in order to make sure that the hicoTEC® material is not damaged by improper storage.

- The storage room should be cool, dry and moderately ventilated
- Storage outdoors without protection against the weather is not allowed
- Storage in damp rooms must be avoided, in order to prevent condensation in or on the material

2. Transport and storage

- At temperatures between 0°C and 40°C
- Protect against direct exposure to the sun
- Take measures to avoid electrostatic charging, where this is necessary
- Store the material tension-free, i.e. without pressure or other deformation
- Hang the reels up to store them, so that no pressure marks are produced. The following resources can, for example, be used.
 - End discs
 - Shelving
 - Unwinding unit
- Keep the material away from sources of heat and ignition
- Secure the material so that it cannot unwind or telescope

If you have any application engineering questions, we will be delighted to answer them. Just contact: info@frenzelit.com, phone: +49 9273 72-0